

JITOOOL 제일타카

Instruction Manual

Crown Stapler

S850/16

S950/16

MADE IN KOREA

**Better Tools,
Better Works!**



Rev. Mar.2021

S950/16, S850/16

Medium Crown Stapler

KOREA	Page 4 to 25
ENGLISH	Page 26 to 43
EXPLODED OF DIAGRAM	Page 18,20,38,40
PART LIST	Page 19,21,39,41

각 부분의 명칭



부속품




오일



렌치

— 4mm (M5용)

— 5mm (M6용)

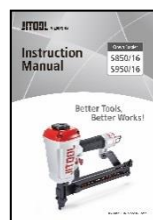

제품 설명서

제품 박스 안의 부속품이 있는지 반드시 확인하여 주십시오.

목차

	Page
각 부분의 명칭	4
안전상의 경고	6
사용방법 및 주의사항	10
점검 및 손질	14
고장 및 제품이상 시 조치방법	15
제품제원	16
분해도	18
부품리스트	19
제일타카 전국 A/S 지정점	20
품질보증서	22

판매상 책임

! 본 공구를 판매하시는 모든 업주나 그 업종에 종사하시는 모든 종사원은 본 공구를 판매 하실 때 소비자에게 반드시 공구 사용 전 공구박스 안에 들어있는 제품 설명서(안전상의 경고, 사용방법 및 기타지시사항)를 읽고 숙지시킨 후 판매 하셔야 합니다.

행할 것



고용주의 책임

! 본 공구를 사용하시는 모든 고용주는 공구 사용자 개인은 물론 주변 사람들의 안전과 공구의 올바른 사용을 위해 본 제품 설명서에 수록된 안전수칙과 기타 모든 지시사항을 준수해야 하며, 본 공구를 이용하는 모든 사람들에게 본 제품 설명서를 읽고 숙지시킨 후 공구를 사용할 수 있도록 주지시켜 주십시오.



-5-

안전상의 경고

■ 사용상의 잘못으로 인한 안전사고를 미연에 방지하고, 제품을 보다 편리하게 이용할 수 있도록 주의 사항을 여러가지 그림표시로 알기 쉽게 나타내었습니다. 꼭 아래의 표시와 그 내용을 잘 이해하고 나서 설명서를 읽어 주십시오.

 위험	이 표시를 무시하고 잘못 사용하시면 사용자가 사망 또는 중상 을 입을 위험이 있음을 나타냅니다.
 경고	이 표시를 무시하고 잘못 사용하시면 사용자가 중상 을 입을 가능성이 있음을 나타냅니다
 주의	이 표시를 무시하고 잘못 사용하시면 사용자가 상해 를 입거나 물적손해 가 발생할 수 있음을 나타냅니다

■ 각각의 그림표시에는 다음과 같은 의미가 있습니다.



일반적인 위험
경고, 주의



반드시 할 것



일반적인 금지




위험

반드시 안전 인증기관으로부터 검증된 보안경, 귀마개, 안전모 등 개인 보호장구를 착용하십시오.



행할 것

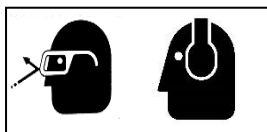

작업시 공기압으로 인해 날아드는 각종 톱밥, 먼지, 기타 이물질들이나 취급 부주의로 튀어나오는 핀(네일, 스테이플 등)으로부터 사용자의 눈과 머리를 보호할 수 있는 보안경, 안전모를 착용하시고 사용장소에 따라 밀폐된 장소나 이와 유사한 여건 속에서 발생하는 소음에 의해 청력의 장애를 가져올 수 있으므로 꼭 귀마개를 착용하십시오.

※일반 안경은 내 충격용 렌즈를 사용하지 않으므로 보안경이 아닙니다.

에어 콤프레서를 이용한 공기 이외의 어떠한 동력원도 사용해서는 절대 안됩니다.



금지




본 공구는 안전 인증기관으로부터 검증된 에어 콤프레서에 의해 발생하는 공기압을 이용하여 작동되도록 설계, 제작되어 있으므로 이를 제외한 어떠한 종류의 가스(산소, 질소 등의 가연성 고압가스)를 사용하지 마십시오. 이 경우 공구의 고장은 물론 오작동 또는 폭발 등의 상황으로 사용자나 주변 사람에게 사망 또는 치명적인 상해를 입힐 수 있습니다.

적정한 공기압을 이용하여 사용하셔야 됩니다.



행할 것

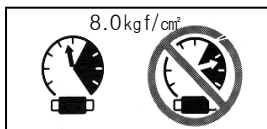

본 공구는 5.0kgf/cm²~8.0kgf/cm² 공기압 범위 내에서 사용되도록 되어있으므로 사용 범위 내에서 공기압을 적절히 조정하여 사용하시고, 공기압이 8.0kgf/cm²를 초과한 상태에서는 공구를 사용하지 마십시오.

이 경우 공구가 파손되어 공구의 수명을 단축 시킬 수 있으며 신체상 상해를 입을 수 있습니다.

안전상의 경고

⚠ 위험



금지

폭발성 있는 물질 근처에서는 절대로 사용하지 마십시오.

가스, 신나, 휘발유 등 폭발성 물질 근처에서 사용하지 마십시오. 휘발성있는 물질이 에어 콤프레셔로 인입되어 공기와 함께 압축될 경우 폭발할 수 있으며 작업시 발생하는 불꽃으로 인하여 화재가 발생할 수 있습니다.
(가스가 차있는 공간에서 작업하지 마십시오.)



금지

절대로 사람이나 동물을 향해 공구를 겨누어서는 안됩니다.

작업시 에어호스를 연결할 때, 에어호스가 연결된 상태일 때, 작업종료 후 에어호스를 분리할 때, 에어호스를 연결하지 않은 상태 등 어떠한 경우에도 절대로 사람이나 동물을 향해 공구를 겨누어 서는 안되며, 작업대상 물체의 표면에만 발사해야 됩니다. 그렇지 않을 경우 사람이나 동물에게 치명적인 상해를 입힐 수 있습니다.



금지

타점시를 제외하고는 절대로 방아쇠를 당겨서는 안되며, 특히 위치 이동 시 방아쇠를 당긴 채 공구를 운반하시면 안됩니다.

방아쇠를 당긴 채 이동하시면 잘못 발사되는 네일, 핀, 스테이플 등으로부터 작업자나 주변 사람에게 치명적인 상해를 입힐 수 있습니다.

⚠ 경고



행할 것

에어 콤프레셔의 에어를 공구의 에어 플러그에 정확히 연결하여 사용 하십시오.

공구를 사용할 때나 사용한 후에 에어를 분리하고 난 뒤에도 공구 내부에 남아있는 잔여 공기에 의해 스스로 발사되어 상해를 일으킬 수 있으므로 에어의 연결 및 분리시 정확하게 확인하고 사용하시기 바랍니다.



행할 것

공구의 모든 부품, 소모품은 JITOOL 상표 순정 부품만을 사용하십시오.

그렇지 않을 경우 공구가 파손되어 공구의 수명을 단축 시킬 수 있으며 신체상 상해를 입을 수 있습니다.



금지

절대로 방아쇠를 당긴 채 네일, 핀, 스테이플 등을 장전해서는 안됩니다.

방아쇠를 당긴 채 네일, 핀, 스테이플 등을 장전해서는 안되며 반드시 네일, 핀, 스테이플 등을 먼저 장전한 후 에어를 연결하십시오. 작업 후에는 반드시 에어를 분리한 후 네일, 핀, 스테이플 등을 제거하십시오. 작업하지 않을 경우 방아쇠를 당기지 마십시오.

안전상의 경고

⚠ 주의



행할 것

공구의 각종 조임 장치(볼트, 스프링류)가 팽 조여져 있는지 반드시 확인하시고 사용하십시오.

공구를 오래 사용하게 되면 작업시의 진동으로 각종 조임부가 느슨하게 풀릴 수 있습니다. 공구를 사용하기 전에 반드시 조임부의 체결 상태를 확인한 후 사용하십시오. 그렇지 않을 경우 공구의 고장으로 내구성 문제뿐만 아니라 오작동에 의해 상해를 입을 수 있습니다.



금지

공구가 작동되지 않을 때 작업자 임의로 안전장치를 제거하거나 조작, 개조해서 사용해서는 절대로 안됩니다.

그렇지 않을 경우 공구의 고장, 오작동으로 상해를 입을 수 있습니다. 작동되지 않을 경우 반드시 가까운 A/S지정점에 문의 하시기 바랍니다.



행할 것

안전한 작업을 위해 타정하고자 하는 대상물을 단단히 고정 한 후 타정하십시오.

타정할 경우 공구의 반동으로 원하지 않는 위치에 발사될 수 있으며 반동으로 인한 안전 작업을 위해 대상물을 단단히 고정 한 후 작업하십시오. 그렇지 않을 경우 치명적인 상해를 입을 수 있습니다.



행할 것

공구를 사용하지 않을 때는 반드시 에어를 분리하고, 매가진(탄창) 내부를 비워야 합니다.

작업 후 작업장을 떠나거나, 공구를 다른 곳으로 옮기거나, 공구를 다른 사람에게 인계하거나 또는 기타의 이유로 공구를 사용하지 않을 때는 반드시 에어를 분리하고, 매가진 내부에 들어있는 네일, 핀, 스테이플 등을 꺼내서 아무 것도 장전되어 있지 않도록 해야 합니다



금지

작업자가 서로 마주 본 상태에서 타정해서는 안되며 단단한 물체, 두께가 얇은 물체, 작업 표면 모서리에 너무 가깝거나 경사면이 있는 부분, 이미 타정되어 있는 네일, 핀, 스테이플 위는 타정하지 마십시오.

그렇지 않을 경우 네일, 핀, 스테이플 등이 관통되거나, 빗나가거나, 튀어나가 상해를 줄 수 있습니다.



금지

공구를 던지거나 떨어뜨리지 마십시오.

공구에 충격을 가할 경우 치명적인 고장이 되어 오작동으로 인한 상해를 입을 수 있습니다. 또한 타정 이외의 용도(망치 대용)로 사용해서는 안됩니다

안전상의 경고

⚠ 주의



행할 것

네일(못)을 빼내는 공구를 사용할 경우 못 머리가 항상 바닥쪽 방향으로 향하게 놓고, 공구를 똑바로 세워서 사용하십시오.

그렇지 않은 경우 상해를 입을 수 있습니다.



행할 것

올바르고 안전한 자세로 작업하여 주십시오.

불안정하고 무리한 상태의 작업은 손, 발, 허리 등에 상해를 줄 수 있습니다.



행할 것

작업 장소를 옮길 때에는 공구의 가동을 멈추고 에어 호스를 분리한 후 이동하십시오.

온도가 영하로 내려갔을 때, 안전하고 편리한 방법으로 기계를 따뜻하게 유지해야 합니다.

만약 그렇지 못할 경우에는 다음의 순서에 따라서 기계를 사용하십시오.



행할 것

(1) 공기압을 조절하여 $3.5\text{kgf/cm}^2 \sim 5\text{kgf/cm}^2$ 범위까지 줄이십시오.

(2) 공구에 장전되어 있는 모든 못을 제거하십시오.

(3) 공구에 에어라인을 연결하고 공타 타정을 하십시오.

- 공구가 작동하는데에 무리가 없을 정도로 압력을 낮게 조절하십시오.

- 작동부가 따뜻해지도록 천천히 작동시키십시오.

- 피스톤의 작동으로 범퍼와 오일류가 원래의 탄성 상태를 유지하게 됩니다.

- 공구의 모든 부품, 소모품은 JITOOL 상표의 순정 부품(네일, 핀, 스테이플 등 포함)만을 사용하십시오.
- 본 공구는 정신 이상을 유발할 수 있는 약물 복용자, 정신 이상자, 음주자가 사용해서는 안되며 특히 어린이, 노약자가 사용해서는 안됩니다.
- 공구의 보관은 건조하고 서늘한 곳에 보관하시고, 특히 어린이 손에 닿지 않게 하십시오.

사용 방법 및 주의 사항

※ 공구를 사용하기 전에 반드시 안전상의 경고를 읽어 주십시오.

준비사항



행할 것

공구를 사용하기 전 반드시 개인 보호 장구(보안경, 귀마개, 안전모 등)를 착용하십시오.



행할 것

공구는 안전 인증 기관으로부터 검증된 에어 콤프레서의 적절한 압력 범위
($5.0\text{kgf/cm}^2 \sim 8.0\text{kgf/cm}^2$)내에서만 사용하십시오.



행할 것

공구의 안전 장치, 방아쇠, 스프링의 작동, 조임 장치(볼트류, 스프링류등)가 이상이
없는지 확인하십시오.



행할 것

작업 시작 전 에어 플러그 쪽에 타카 전용 오일을 5~6방울 정도 주입하여 주십시오.
(가능한 하루에 한 번 정기적으로 주유하십시오.)



행할 것

에어 호스의 길이는 5m 이내인지 확인해 주십시오.
※ 손상, 파손된 호스나 연결부가 사용되고 있지는 않은지 반드시 확인하십시오.



행할 것

안전한 작업을 위해 공구를 사용 하기 전 작업자 주변의 사람들을 공구 사용 장소 주위에서
되도록 멀리 떨어지게 한 후 작업하십시오.
작업중 파손, 파편 등으로 인해 주위에 있는 인체, 물체에 손상을 줄 수 있습니다.

사용 방법



행할 것

사용 전 매가진(탄창) 내부가 비어있는지 확인하십시오.
공구의 총구가 작업자나 주변 사람들에게 향하지 않도록 하고 매가진(탄창)내부가 비어
있는지 확인하십시오.



행할 것

제품의 기종에 맞는 네일, 핀, 스테이플을 장착하십시오.
매가진(탄창)에 작업목적에 적합한 규격 (JITool 상표가 있는 순정품)의 네일, 핀, 스테플
등을 장전하십시오. 이때 네일, 핀, 스테플 등은 반드시 적정량만 장전하십시오.
그렇지 않을 경우 공구의 고장 원인이 됩니다.

사용 방법 및 주의 사항

※ 공구를 사용하기 전에 반드시 안전상의 경고를 읽어 주십시오.



에어 호스를 연결하십시오.

사용 공기압이 5.0kgf/cm²~8.0kgf/cm² 범위 내에서 사용되도록 조절한 후 제품에 에어 호스를 연결하십시오.

행할 것

※안전 장치가 부착된 경우 단발, 연발, 잠금 장치를 조절한다.

안전 장치가 부착된 공구 중에는 사용용도에 따라 단발, 연발, 잠금으로 조정하여 사용할 수 있도록 레버가 부착되어 있습니다.

※사용 방법

단/연타 및 잠금 장치의 조절은 레버를 누른 채 돌려 주십시오.

- (1) 단타 사용 : 한발씩 정확한 위치에 작업하실 때 사용
레버에 표시된 화살표를 공구의 총구반대 방향으로 향하게 하고 타점 목표 지점에 안전장치를 누른 상태에서 방아쇠를 당기면 발사됩니다.



행할 것

- (2) 연타 사용 : 연속적으로 작업하실 때 사용.
레버에 표시된 화살표를 옆의 그림 방향으로 향하게 하고 방아쇠를 당긴 상태에서 타점 목표지점에 안전 장치를 계속 눌러주시면 발사됩니다.



- (3) 잠금 장치 : 작업하지 않을 때 사용.
작업이 없을 때는 옆의 그림과 같은 위치로 고정시켜 줍니다.
이 상태에서는 방아쇠가 당겨지지 않습니다.



행할 것

작업할 위치를 정한 후 타점 목표 지점에 정확히 고정시키고 방아쇠를 당겨주십시오.
안전 장치가 있는 공구는 안전장치가 뒤로 밀렸을 때만 작동됩니다.

- 안전 장치가 부착된 공구는 안전 장치를 타점 목표 지점에 대고 눌렀을 때 안전 장치가 속방아쇠를 밀어주면서 발사되도록 되어있고, 누르지 않을 때는 발사가 되지 않도록 제작되어 있습니다.(F30,630은 방아쇠 타입)
- 안전 장치가 부착된 공구(30mm 이상의 네일, 핀 등을 사용하는 공구에 주로 부착)는 안전 사고를 미연에 방지하기 위한 장치이므로 이를 제거하거나 조작해서 사용해서는 안됩니다. 만일 안전 장치가 이상이 있을 경우에는 가까운 서비스 지정점에 문의 하십시오.

사용 방법 및 주의 사항

※ 공구를 사용하기 전에 반드시 안전상의 경고를 읽어 주십시오.



행할 것

배기 공기에 의해 작업장소 주변의 먼지, 이물질 등이 날리는 것을 막기 위해 공구의 두경(Cap)에 부착된 배기 커버를 사용자의 편의에 따라 그림과 같이 화살표 방향으로 조정하여 사용하십시오.



행할 것

작업을 끝낸 후 에어 호스를 분리해 주십시오.



행할 것

매가진 내부의 핀, 네일, 스테이플을 제거해 주십시오.
에어를 분리한 후 매가진(탄창) 내부를 비운 뒤 먼지, 이물질, 기름 등의 오염 물질을 깨끗이 닦아 내십시오.

주의



행할 것

- 공구를 사용하기 전에 공구에 수분이 인입되어 있을 수 있으므로 수분을 제거한 후 에어를 연결하십시오.
(에어를 연결하기 전 공구의 에어 플러그를 바닥 방향으로 향하게 세워 공구 내부의 수분을 제거하십시오.)
- 지면보다 높은 위치에서 작업할 때는 에어 호스에 충분한 여유 길이를 주시고 작업자는 공구가 떨어져 파손되는 것을 막기 위해 안전줄을 공구에 설치하십시오.
작업도중 공구를 높은 곳에서 떨어뜨릴 경우, 공구의 고장, 파손은 물론 충격에 의한 오발사 등으로 상해를 입힐 수 있습니다.
- 작업 시 공구를 사용하지 않는 다른 한손은 타점 목표 지점으로부터 최소한 20cm 이상 거리에 두는 것이 좋고, 얼굴이나 신체의 다른 부위 가까이에서 사용하지 마십시오.
너무 가까이 작업하시면 네일, 핀, 스테이플이나 먼지, 이물질 등이 튀어나오는 경우가 있어 상해를 입을 수 있습니다.
- 에어 콤프레셔와 공구 연결 장치 사이에 반드시 에어 필터를 부착하여 사용하십시오.
습기가 많은 상태이거나 또는 이물질이 인입 된 에어 콤프레서는 공구의 고장은 물론 작동이 제대로 되지 않을 수 있습니다. 반드시 이물질을 걸러수 있는 필터를 부착하십시오.
- 작업을 종료하거나 공구를 사용하지 않을 때는 반드시 에어 호스를 분리하십시오.
- 공구를 보관하실 때는 깨끗하게 청소한 후 공구 박스에 넣어 건조하고 서늘한 곳에 보관하십시오. 특히 어린이의 손이 닿지 않는 곳에 보관 하십시오.
 - 하절기 : 직사광선, 밀폐된 공간은 피해 주십시오.
 - 동절기 : 난로 주위, 추운 장소는 피해 주십시오.

사용 방법 및 주의 사항

※ 공구를 사용하기 전에 반드시 안전 수칙을 읽어 주십시오.

주의



금지

- 공구에 네일, 핀, 스테이플 등이 장전되지 않은 채 공타로 타격하시면 안됩니다.
공타로 타격하게 되면 내부의 범퍼가 손상되어 원활한 작동이 되지 않을 수 있습니다.
- 공구를 네일, 핀, 스테이플 등의 타격 외에 다른 목적으로는 절대 사용하지 마십시오.

본제품은 노즈와 드라이버 가이드, 가이드 커버(총구에 해당)의 결합 구조가 볼트로 체결되어 있으므로, 사용 도중 네일의 낀 현상(jam)이 발생된 경우 강제로 네일을 빼내지 마십시오. 반드시 다음의 방법으로 빼내 주십시오.

- (1) 손가락을 방아쇠로 부터 떼낸다.
- (2) 잠금 장치로 단/연타 레버를 조정한다.
- (3) 매가진으로 부터 잔량의 핀, 네일, 스테이플 등을 제거한다.
- (4) 공구로 부터 에어의 연결을 분리 시킨다.
- (5) "L"렌치(5.6mm)를 사용하여 볼트를 풀어 가이드 커버, 드라이버 가이드를 완전히 분리한 후 낀 현상(jam)이 발생된 핀을 제거하고 위와 반대의 순서로 재조립 한다.



행할 것



- 주의 : - 낀 현상으로 핀을 제거할 경우 공구를 작업자나 주변 사람을 향해서는 안됩니다.
- 낀 현상으로 핀을 제거한 후 재결합을 할 경우 볼트를 확실하게 꼭 조인 후 다른 부위의 이상이 없는지 꼭 확인하시기 바랍니다.
 - 본래의 상태대로 완전히 재결합이 되었는지 확인한 후 에어를 연결 하십시오
 - 공구의 재결합 과정 중 이상이 발생되어 재결합이 불안정하거나 불가할 때는 즉시 가까운 A/S 지점점에서 완전한 수리를 받은 후 사용하십시오.

사용 방법 및 주의 사항

※ 공구를 사용하기 전에 반드시 안전상의 경고를 읽어 주십시오.




금지

■ 스테이플을 장전하거나 제거시에는 공구의 총구를 아래 방향으로 하며, 방아쇠를 당기거나 안전 장치를 누르지 마십시오.

다음 순서에 따라 스테이플을 장착하십시오


- (1) 푸셔를 메가진 뒤쪽으로 움직여서 푸셔 스톱퍼에 의해 고정되게 하십시오.
- (2) 스테이플을 메가진 상부로 삽입하여 앞쪽으로 전진시키십시오.
- (3) 푸셔 스톱퍼를 손으로 눌러서 푸셔를 앞쪽으로 전진 시키십시오.

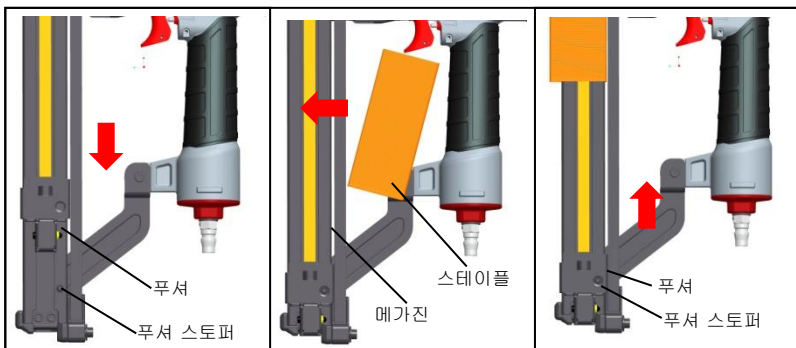

행할 것

다음 순서에 따라 스테이플을 제거하십시오

- (1) 푸셔를 메가진 뒤쪽으로 움직여서 푸셔 스톱퍼에 의해 고정되게 하십시오.
- (2) 스테이플을 메가진 상부방향으로 제거하십시오.
- (3) 푸셔 스톱퍼를 손으로 눌러서 푸셔를 앞쪽으로 전진 시키십시오.

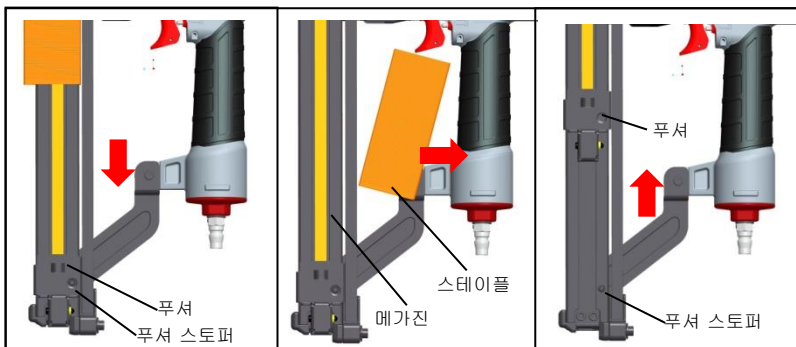

행할 것

점검 및 손질

■ 공구의 사용 후에는 안전하고 깨끗이 보관하십시오.

⚠ 주의



행할 것

- 점검, 손질 시에는 에어의 연결을 분리시켜 주십시오.
- 에어의 연결을 분리한 후에는 매가진(탄창) 내부의 핀, 네일, 스테이플 등을 제거하십시오.
- 반드시 장갑을 끼고 점검 및 손질하여 주십시오.

⚠ 경고



금지

- 분해, 수리, 개조를 하지 마십시오.

-당사 서비스 지정 대리점에서 지정한 요원 이외의 사람은 분해하거나 수리, 개조하지 마십시오. 이상작동으로 상해를 입을 수 있습니다.



행할 것

- 사용 전·후에 항상 점검해 주십시오.

-공구의 모든 조임 장치가 단단하게 체결되어 있습니까?

(지속적으로 사용할 경우 반발에 의해 조임이 느슨해질 수 있으므로 장치는 항상 단단히 체결되어야 합니다.

그렇지 않은 경우 공구의 고장, 파손 또는 오작동이 발생할 수 있습니다.)

-공구의 공기압이 알맞게 설정되었습니까?

($5.0\text{kgf/cm}^2 \sim 8.0\text{kgf/cm}^2$)

-작업하기 위한 안전 보호 장구를 착용 하셨습니까?

(보안경, 귀마개, 안전모 등)

-안전 장치와 방아쇠가 원활하게 작동합니까?

(작동이 원활하지 않은 경우에는 공구를 사용하지 마시고 가까운 A/S 지정점에서 점검을 받아야 합니다.)

-부품이 마모되지는 않았습니까?

(뿔이 발사 되는 노즈부와 피스톤 블레이드가 심하게 파손되면 오작동을 일으켜 상해를 입을 수 있습니다. 반드시 A/S 지정점에서 점검을 받아야 합니다.)



행할 것

- 사용 후에 올바르게 손질하여 주십시오.

-최적의 조건으로 공구를 사용하기 위해서 타카 전용 윤활제를 주입하십시오.

(공구를 사용하기 전에 에어 플러그 쪽의 구멍에 공구 전용 윤활제를 3~4방울 정도 주입한 뒤 에어호스를 연결하십시오. 공구전용 윤활제 이외의 휘발유, 시너, 경유 등 다른 물질을 윤활제 대용으로 사용하시면 부품에 손상을 줄 수 있습니다.

-공구의 보관은 깨끗하게 청소한 후 공구 박스에 넣어 두시고 건조하고 서늘한 곳에 보관하십시오. 특히 어린이 손이 닿지 않는 곳에 보관 하십시오.

-손질이 끝나면 부품을 정확히 조립하십시오.

(정확한 조립이 되지 않으면 오작동으로 상해를 입을 수 있습니다.)

고장 및 제품 이상 시 조치 방법



행할 것

제품에 이상이 있을 때는 서비스를 의뢰하기 전에 다음사항을 확인하여 주십시오.

구분	증상	조치 방법(서비스 의뢰)
방아쇠를 당기지 않을 경우	방아쇠에서 에어가 새어 나온다.	방아쇠를 풀어서 이물질 제거해 주고 오링이 마모되었을 경우 교환한다.
	노즈 쪽으로 에어가 새어 나온다.	실린더 가이드 오링을 교환한다. 실린더 오링을 교환한다.
	뚜껑 쪽에서 소리가 난다.	헤드 밸브 내(內)오링을 교환한다. 헤드 밸브를 교환한다.
방아쇠를 당길 경우	노즈 쪽에서 새는 소리가 들린다.	범퍼의 이 물질을 제거해준다. 범퍼 파손 시 교환해 준다.
	뚜껑에서 이상한 소리가 들린다.	뚜껑 쉘을 살펴보고 스프링 파손 시 교환한다.
	작동이 전혀 안된다.	뚜껑을 풀고 헤드 밸브 작동을 확인하고 작동이 안될 경우 헤드 밸브 외(外)오링을 교환한다. 에어 플러그를 교환해 준다.
작동을 했을 경우	피스톤 후진 시 이상한 소리가 난다.	헤드 밸브를 교환한다. 피스톤 오링을 교환한다.
	뭇이 발사되지 않는다.	푸셔 스프링을 교환한다.



행할 것

조치 방법의 수리는 소정의 교육 훈련을 이수한 자격 소지자만이 수행할 수 있습니다.



행할 것

수리를 할 때는 반드시 JITOOL 상표가 있는 순정 부품을 사용해야 됩니다.



행할 것

기타 문의 사항은 가까운 A/S 지정점에 문의하십시오.



행할 것

수명이 다 된 공구를 처분 할 때는 환경에 오염되지 않도록 본 서비스 지정점에 보내어 폐기하도록 해야 합니다.

제품 제원


모델명	S850/16	S950/16
형식명	16GA. 7/16" 크라운 스테플러	16GA. 1/2" 크라운 스테플러
SIZE (mm) (HxWxL)	300 X 392 X 101 (mm) (11-7/8" X 15-7/16" X 4")	300 X 392 X 101 (mm) (11-7/8" X 15-7/16" X 4")
중량	2.5kg	2.5kg
사용 공기압	5.0 kg/cm ² ~8.0kg/cm ²	5.0 kg/cm ² ~8.0kg/cm ²
에어 플랜지 접속경	1/4" NPT	1/4" NPT
매가진(탄창) 용량	160발	160발

못 사양

모델명	S850/16	S950/16
크라운	11.1mm (7/16")	12.2mm (1/2")
길이	25mm ~ 50mm (1" ~ 2")	25mm ~ 50mm (1" ~ 2")
폭	1.40mm (0.055")	1.40mm (0.055")
두께	1.57mm (0.062")	1.57mm (0.062")
게이지	16	16

반드시 규격(JITool순정부품)에 맞는 핀, 네일을 사용하십시오.

EXPLODED DIAGRAM OF S850/16

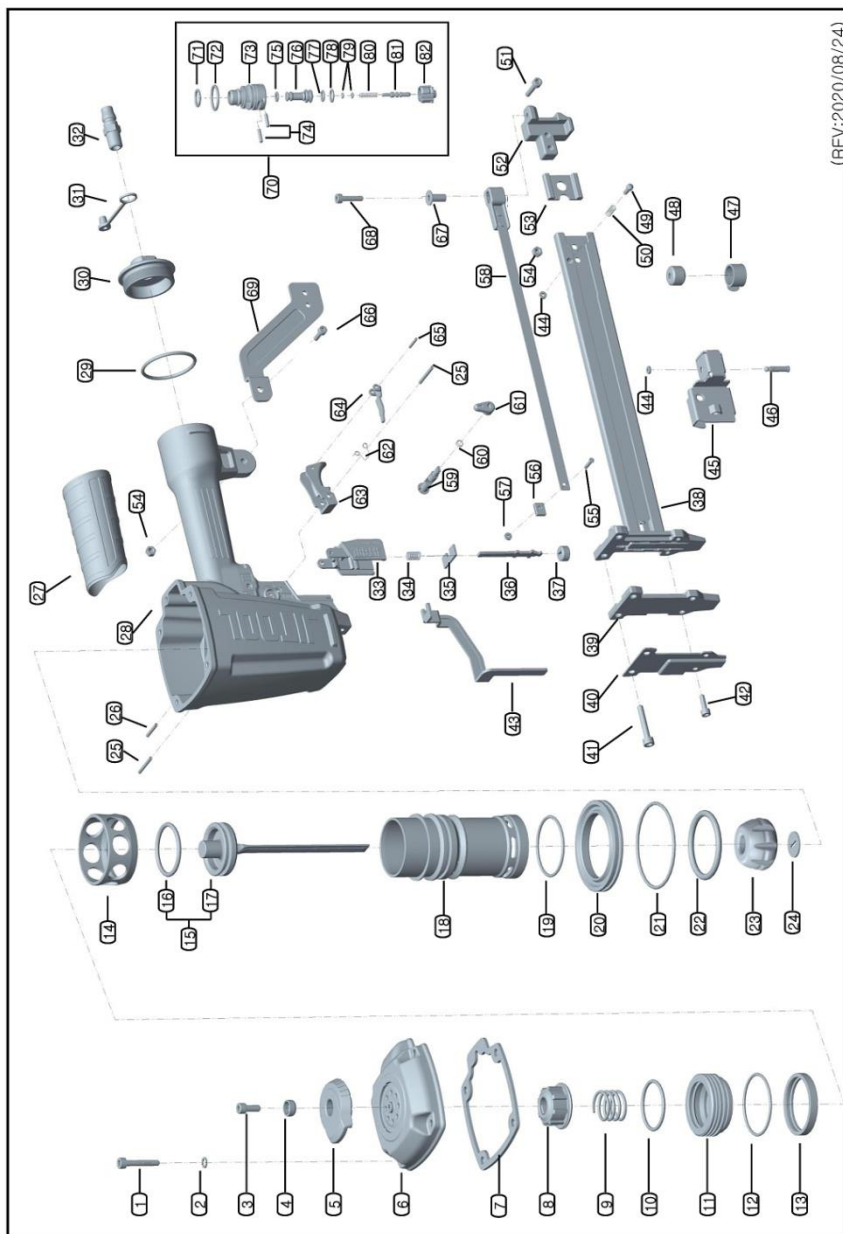

(REV:2020.08/24)

부품 리스트


S850/16(16GA. 7/16" CROWN STAPLER)

NO.	DESCRIPTION	PART NO.	QTY	NO.	DESCRIPTION	PART NO.	QTY	NO.	DESCRIPTION	PART NO.	QTY
1	볼트 (M6x28L)	Z-06-280	4	29	엔드 캡 오링	JNS45-B-003	1	57	핀 라테이너	JN100-G-022	1
2	스프링 와셔 (for M6)	W-06	4	30	엔드 캡	JNS45-B-002	1	58	스테이플 가이드 어셈블리	S950/16-M-P002	1
3	볼트 (M6x15L)	ZN-06-150	1	31	플러그 캡	CT64-B-006	1	59	핀거 팁 스위치 캡	CT64-T-004	1
4	배기 커버 외서	CT64-C-007	1	32	에어 플러그	CT64-B-005	1	60	핀거 팁 스위치 스프링	CT64-T-005	1
5	매기 커버	CT64-C-003	1	33	커넥터 하우징	CT64-S-103	1	61	핀거 팁 스위치 바	ST64-T-003	1
6	캡	S950/16-C-001	1	34	커넥터 스프링	CT64-S-004	1	62	방아쇠 스프링	CT64-T-008	1
7	개스킷	CT64R3-C-102	1	35	커넥터 홀더	CT64-S-005	1	63	걸 방아쇠	CT64-T-001	1
8	캡 범퍼	CT64-H-005	1	36	커넥터	CT64-S-002	1	64	속 방아쇠	ST64-T-002	1
9	헤드 밸브 스프링	CT64-H-006	1	37	라테이너	CT64-S-006	1	65	롤핀 (φ2.5x16L)	R-25-160	1
10	헤드 밸브 오링 (인)	CT64-H-003	1	38	노크 어셈블리	S850/16-M-P001	1	66	볼트 (M5x16L)	Z-05-160	1
11	헤드 밸브	CT64-H-001	1	39	드라이버 가이드	S850/16-G-002	1	67	부싱	S950/16-L-007	1
12	헤드 밸브 오링 (아웃)	CT64-H-004	1	40	가이드 커버	S950/16-G-003	1	68	볼트 (M5x25L)	Z-05-250	1
13	헤드 밸브 실	CT64-H-002	1	41	볼트 (M6x35L)	ZN-06-350	2	69	브래킷	S950/16-M-006	1
14	칼라	CT64-A-004	1	42	볼트 (M5x16L)	ZN-05-160	2	70	밸브 세트	NV-V-P001	1
15	피스톤 세트	S850/16-P-P001	1	43	콘택트 암	S950/16-S-001	1	71	밸브 오링 (중)	NV-V-001	1
16	피스톤 오링	CT64-P-003	1	44	스토퍼 실	951-M-008	2	72	롤러저 캡 오링	CT64-V-011	1
17	피스톤	S850/16-P-P002	1	45	부서	S850/16-M-003	1	73	밸브	NV-V-003	1
18	실린더	S950/16-A-001	1	46	스프링 핀	S950/16-M-007	1	74	밸브 핀 (φ3x14.2L)	NV-V-013	2
19	실린더 오링	CT64-A-005	1	47	부서 스프링 세트	S950/16-M-P003	1	75	밸브 롤러저 오링 (상)	NV-V-004	1
20	실린더 가이드	CT64-A-002	1	48	드럼	S950/16-M-010	1	76	밸브 롤러저	NV-V-007	1
21	실린더 가이드 오링	CT64-A-006	1	49	부서 스토퍼	S850/16-M-010	1	77	밸브 롤러저 오링 (중)	CT64-V-005	1
22	서플라이 홀 실	S950/16-A-007	1	50	부서 스토퍼 스프링	951-M-011	1	78	밸브 롤러저 오링 (하)	NV-V-006	1
23	범퍼	CT64-A-003	1	51	볼트 (M5x22L)	Z-05-220	2	79	롤러저 오링	CT64-V-008	2
24	드라이버 가이드 플레이트	S850/16-A-008	1	52	매거진 엔드 캡	S850/16-L-001	1	80	롤러저 스프링	CT64-V-009	1
25	롤핀 (φ3x28L)	R-30-280	2	53	매거진 스페이서	S850/16-M-021	1	81	롤러저	NV-V-010	1
26	롤핀 (φ3x22L)	R-30-220	1	54	락 너트 (for M5)	NN-05	3	82	롤러저 캡	NV-V-012	1
27	그립	CT64R3-B-004	1	55	노크 핀	S950/16-G-004	1				
28	바디	CT64R3-B-001	1	56	스테이플 가이드 라버	S950/16-M-020	1				

(개정일 : 2020/08/24)

**상기 부품은 자사의 사양으로 인하여 변경될 수 있습니다.

EXPLODED DIAGRAM OF S950/16

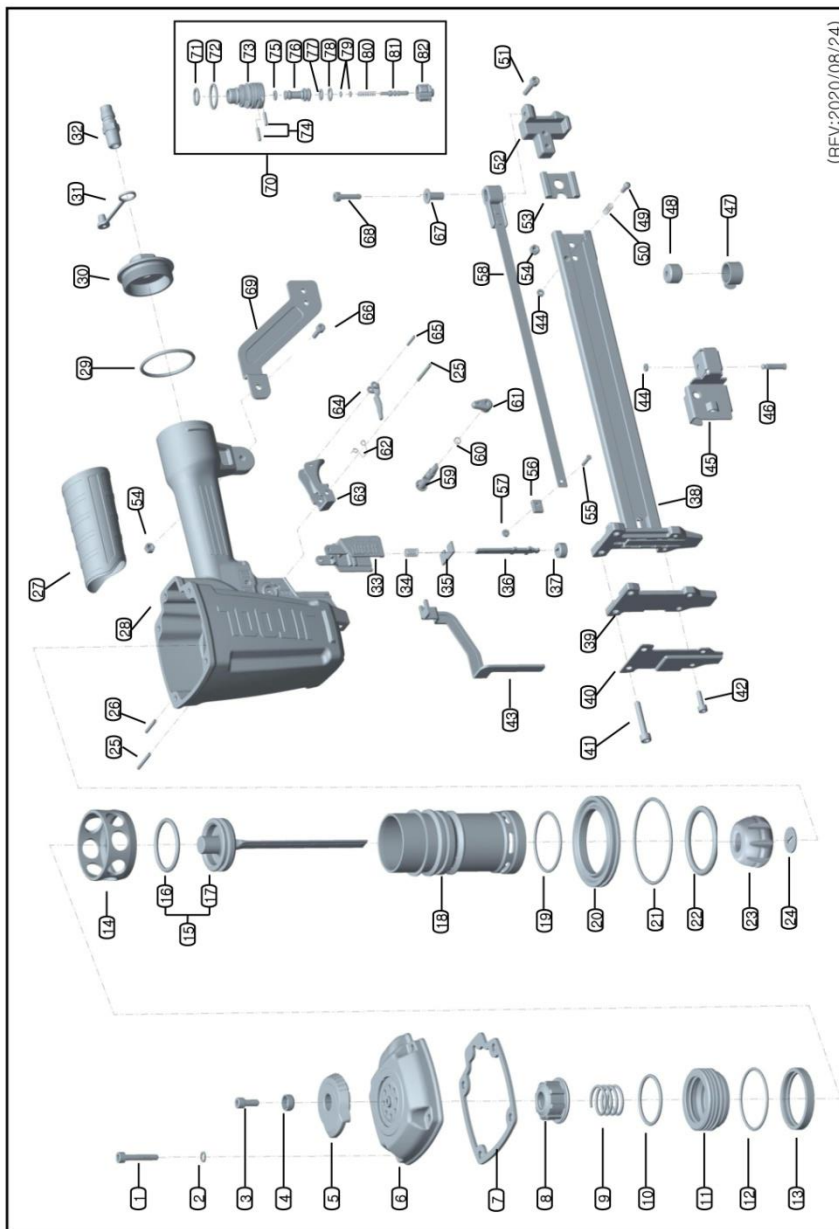

(REV:2020.08/24)

부품 리스트

S950/16(16GA. 1/2" CROWN STAPLER)

NO.	DESCRIPTION	PART NO.	QTY	NO.	DESCRIPTION	PART NO.	QTY	NO.	DESCRIPTION	PART NO.	QTY
1	볼트 (M6x28L)	Z-06-280	4	29	엔드 캡 오링	JNS45-B-003	1	57	핀 라테이너	JN100-G-022	1
2	스프링 와셔 (for M6)	W-06	4	30	엔드 캡	JNS45-B-002	1	58	스테이플 가이드 어셈블리	S950/16-M-P002	1
3	볼트 (M6x15L)	ZN-06-150	1	31	플러그 캡	CT64-B-006	1	59	핀거 팁 스위치 캡	CT64-T-004	1
4	배기 커버 와셔	CT64-C-007	1	32	에어 플러그	CT64-B-005	1	60	핀거 팁 스위치 스프링	CT64-T-005	1
5	배기 커버	CT64-H-001	1	33	커넥트 하우징	CT64-S-103	1	61	핀거 팁 스위치 바	ST64-T-003	1
6	캡	S950/16-C-001	1	34	커넥트 스프링	CT64-S-004	1	62	방아쇠 스프링	CT64-T-008	1
7	가스킷	CT64R3-C-102	1	35	커넥트 홀더	CT64-S-005	1	63	감방아쇠	CT64-T-001	1
8	캡 범퍼	CT64-H-005	1	36	커넥트	CT64-S-002	1	64	속 방아쇠	ST64-T-002	1
9	헤드 밸브 스프링	CT64-H-008	1	37	라테이너	CT64-S-006	1	65	볼핀 (φ2.5x16L)	R-25-160	1
10	헤드 밸브 오링 (인)	CT64-H-003	1	38	노크 어셈블리	S950/16-M-P001	1	66	볼트 (M5x16L)	Z-05-160	1
11	헤드 밸브	CT64-H-001	1	39	드라이버 가이드	S950/16-G-002	1	67	부싱	S950/16-L-007	1
12	헤드 밸브 오링 (아웃)	CT64-H-004	1	40	가이드 커버	S950/16-G-003	1	68	볼트 (M5x25L)	Z-05-250	1
13	헤드 밸브 실	CT64-A-002	1	41	볼트 (M6x35L)	ZN-06-350	2	69	브래킷	S950/16-M-006	1
14	칼라	CT64-A-004	1	42	볼트 (M5x16L)	ZN-05-160	2	70	밸브 세트	NV-V-P001	1
15	피스톤 세트	S950/16-P-P001	1	43	콘택트 암	S950/16-S-001	1	71	밸브 오링 (중)	NV-V-001	1
16	피스톤 오링	CT64-P-003	1	44	스토퍼 실	951-M-008	2	72	플런저 캡 오링	CT64-V-011	1
17	피스톤	S950/16-P-P002	1	45	푸셔	S950/16-M-003	1	73	밸브	NV-V-003	1
18	실린더	S950/16-A-001	1	46	스프링 핀	S950/16-M-007	1	74	밸브 핀 (φ3x14.2L)	NV-V-013	2
19	실린더 오링	CT64-A-005	1	47	푸셔 스프링 세트	S950/16-M-P003	1	75	밸브 플런저 오링 (상)	NV-V-004	1
20	실린더 가이드	CT64-A-002	1	48	드럼	S950/16-M-016	1	76	밸브 플런저	NV-V-007	1
21	실린더 가이드 오링	CT64-A-006	1	49	푸셔 스토퍼	S950/16-M-010	1	77	밸브 플런저 오링 (중)	CT64-V-005	1
22	서플라이 홀 실	S950/16-A-007	1	50	푸셔 스토퍼 스프링	951-M-011	1	78	밸브 플런저 오링 (하)	NV-V-006	1
23	범퍼	CT64-A-003	1	51	볼트 (M5x22L)	Z-05-220	3	79	플런저 오링	CT64-V-008	2
24	드라이버 가이드 플레이트	S950/16-A-008	1	52	매가진 엔드 캡	S950/16-L-001	1	80	플런저 스프링	CT64-V-009	1
25	롤핀 (φ3x28L)	R-30-280	2	53	매가진 스페이스	S950/16-M-021	1	81	플런저	NV-V-010	1
26	롤핀 (φ3x22L)	R-30-220	1	54	락 너트 (for M5)	NN-05	3	82	플런저 캡	NV-V-012	1
27	그립	CT64R3-B-004	1	55	노크 핀	S950/16-G-004	1				
28	바디	CT64R3-B-001	1	56	스테이플 가이드 라버	S950/16-M-020	1				

(개정일 : 2020/08/24)

**상기 부품은 자사의 사양으로 인하여 변경될 수 있습니다.

제일타카 전국 A/S 지정점

전국 영업소		경도기계	031-978-6858	고양시 덕양구	영양동공구	031-611-0027	평택시 옥곡동	
광주영업소	062-526-8295	북구 임동	하양공구	031-918-0601	고양시 일산구	희성직업공구	031-611-0909	평택시 옥곡동
인천영업소	032-766-7490	동구 송현동	문화공구	031-969-0988	고양시 일산동구	제일홈마트	031-653-0945	평택시 신대동
대전영업소	042-636-0040	대화동 264	금릉종합공구	031-768-8080	광주시 오포읍	이서&T	031-686-8911	평택시 복음읍
대구영업소	052-421-8295	서구 이현동	계양공구	031-767-0989	광주시 오포읍	대영상사	031-542-7065	포천시 가산면
경남영업소	055-329-3755	김해시 삼방동	제일종합공구백화점	031-765-6494	광주시 오포읍	유포스	031-543-8952	포천시 가산면
부산영업소	051-303-9800	사상구 삼락동	근동공구	031-798-0948	광주시 초월읍	하남영업소	031-793-0119	하남시 덕동동
서해영업소	031-683-5022	평택시 청북면	세창종합상사	031-797-6166	광주시 초월읍	송일종합상사	031-233-0985	화성시 반월동
서 울		청계공구	031-988-0979	김포시 길동	홍일상사	031-230-9577	화성시 봉담읍	
한빛상사	02-470-0989	강동구 성내동	신진공구	031-982-3509	김포시 대곶면	인 천		
신흥동	02-483-4439	강동구 전호4동	동신종합공구	031-998-4909	김포시 양안면	강화유업	032-932-0641	강화읍 관천리
대원공구	02-484-2962	강동구 전호동	가나공구	031-511-0934	남양주시 회도읍	형제공구합인마트	032-542-5365	계양구 계산동
신한공구	02-474-9695	강동구 전호동	한영종합공구	031-573-0944	남양주시 오남읍	유림종합공구	032-888-0991	남구 송의동
미래에셋공구	02-980-0483	강북구 미아4동	청대공구백화점	031-559-3200	남양주시 평내동	도일종합공구	032-872-2109	남구 주안3동
원공	02-903-0389	강북구 수유동	공구마트	031-594-0983	남양주시 회도읍	한진공구	032-428-1810	남동구 간석동
금호공구	02-877-9933	관악구 봉천동	마석공구	031-595-6540	남양주시 회도읍	대일기계	032-421-8141	남동구 구월동
준영상사	02-455-0989	관악구 구의동	금곡백화점	031-866-0945	동두천시 상안동	상원종합공구	032-422-0909	남동구 구월동
동일상사	02-2634-8516	구로구 구로동	이달공구	031-753-2109	성남시 수지구	근동고객	032-571-0275	동구 송림동
미감시스텔라	02-2625-7291	구로구 구로본동	종합전기공구	031-752-3532	성남시 수지구	마니상사	032-763-2886	동구 송림동
동일가정상사	02-803-1358	금천구 시흥동	물리공구	031-752-8977	성남시 중원구	영진상사	032-589-0902	동구 송림동
우현수리공구	02-806-8340	금천구 시흥동	제일홈공구	031-756-8609	성남시 중원구	영문동공구	032-657-7686	부천시 소사구
제일공구	02-806-0994	금천구 시흥동	청계공구	031-752-0938	성남시 중원구	제일홈공구	032-651-0697	부천시 소사구
장안종합공구	02-2236-0909	동대문구 답십리동	현대공구	031-755-4238	성남시 중원구	공구장사	032-512-0904	부평구 부평동
대명A/S	02-2216-2346	동대문구 답십리동	대명가정상사	031-295-0945	수원시 고색동	부흥철물	032-529-8974	부평구 부평동
청계공구	02-309-1980	은평구 역촌동	제일종합공구	031-257-2909	수원시 구천동	대 전		
신일공구	02-572-5092	서초구 양재1동	동영종합공구	031-252-3809	수원시 팔달구	금원공구	041-625-8916	동구 가양동
광진공구	02-574-0944	서초구 양재동	원흥종합공구	031-241-2853	수원시 팔달구	대화동공구	042-670-8027	대덕구 대화동
양재공구	02-576-0989	서초구 양재동	신흥초점	031-224-2743	수원시 팔달구	삼원상사	042-621-7778	대덕구 오정동
성복종합공구	02-986-7466	성북구 삼선동	원호종합상사	031-632-1060	시흥시 마정면	오정공구	042-636-3477	대덕구 오정동
니공	02-909-0901	성북구 하월동	대흥초점	031-314-5883	시흥시 은행동	한양공구상사	042-625-6633	대덕구 오정동
공구백화점	02-406-0609	송파구 가락동	영진종합상사	031-314-7660	시흥시 은행동	동보종합공구	042-252-0148	동구 원동
보소종합상사	02-417-3309	송파구 삼전동	원일공구	031-479-0598	안산시 동안구	대한공구	042-532-3025	서구 도마1동
대명공구마트	02-418-0945	송파구 잠실동	대명공구	031-409-0949	안산시 상록구	한대종합공구상사	042-531-4470	서구 도마동
해랑종합공구	02-2602-0942	양천구 신일동	영진상사	031-411-7639	안산시 월피동	충 남		
강남동공구	02-2676-1127	영등포구 영등포동	진일종합공구	031-676-0944	안산시 대덕면	한대철물	041-856-1503	공주시 신관동
별진철물	02-844-2121	영등포구 대림3동	세명공구	031-675-4109	안산시 봉산동	대흥상사	041-753-4270	공산군 공산읍
서부영업소	02-389-3008	은평구 갈현동	연대공구	031-424-2638	안양시 동안구	한일기계상사	041-751-0876	공산군 공산읍
유일공구	02-384-0909	은평구 역촌동	백석공구	031-879-7522	양주시 백석읍	충남공구	041-836-0949	논산시 대교동
녹번동	02-386-9801	은평구 용암1동	제일공구서	031-771-3949	양평군 양평읍	당진공구	041-354-0909	당진군 읍내리
신양종합공구	02-303-0171	은평구 용암3동	한대종합상사	031-883-8909	여주시 여주읍	보령공구	041-931-0989	보령시 대천동
은평공구	02-305-4221	은평구 용암동	진양공구	031-373-9647	오산시 원동	제일홈공구	041-551-1525	천안시 사직동
서원플러스서비스	02-2273-8965	종구 수로동	동백종합공구	031-282-0900	용인시 기흥구	동명공구	041-631-1900	홍성군 홍성읍
대전상사	02-2272-5471	종구 주교동	동부종합공구	031-338-0946	용인시 처인구	충 북		
성익철물공구	02-313-7516	종구 중원동	수지종합공구	031-262-0095	용인시 용역면	이천종합상사	043-881-0989	용성군 감곡면
OK공구	02-494-0989	종양구 상봉동	진양공구	031-844-0989	의정부시 의정부	제천상가리공구	043-646-0908	제천시 화산동
경 기		유영상사	031-638-0967	이천시 사들동	은혜철물	043-838-1274	충청군 충령읍	
가평기계공구	031-581-2145	가평군 가평읍	종합초점점목공구	031-944-2059	파주시 조리읍	영성철물공구	043-215-0988	황주시 삼당동

제일타카 전국 A/S 지정점

계양종합상사	043-259-8171	청주시 상당구	동신종합공구	055-382-5657	양산시 남부동	해동건설기계	053-252-7678	충구 인근동
성일종합상사	043-215-0944	청주시 상당구	경남건설기계	055-372-0989	양산시 물금읍	강 주		
신일종합상사	043-234-3609	청주시 흥덕구	조영종합상사	055-385-4882	양산시 북정	리오	062-513-4568	북구 동림동
부 산			고려종합공구	055-367-0909	양산시 웅상동	유성철물금속	062-522-9507	북구 우산동
진흥목공구	051-971-6689	강서구 강동동	평양집집	055-741-4291	진주시 북곡동	한옥기업	062-511-3700	북구 운암동
영은고역	051-315-6658	강서구 대저동	대경공구	055-759-8909	진주시 상대1동	(주)탑철물공구	062-526-2609	북구 운암동
금륜공구	051-523-1677	금정구 금사동	남강철물	055-762-1672	진주시 상대동	한일물공구	062-363-0990	북구 운암동
대전공구	051-524-0090	금정구 금사동	경창종합상사	055-758-0443	진주시 상평동	흥야상사	062-529-0957	북구 중흥동
제일철물	051-514-1304	금정구 남산동	계양산업공구	055-759-0989	진주시 상평동	제일철물공구	062-527-0977	북구 중흥동
치주목공구	051-512-8727	금정구 광천동	신흥철물	055-757-4007	진주시 상평동	세광공구	062-603-3111	서구 매월동
진흥기계공구	051-634-5800	동구 범일2동	지원철물	055-761-1617	진주시 상평동	철오공구	062-603-0942	서구 매월동
대흥물공구	051-554-2081	동래구 낙민동	안일보철물공구	055-758-8949	진주시 장대동	화정물공구	062-364-3370	서구 양동
온천물공구	051-554-8258	동래구 온천1동	창계천공구철물	055-757-6755	진주시 하대동	신성플렉스	062-369-3651	서구 양동
진흥기공사	051-324-9948	사상구 광천동	육일공기공사	055-238-6209	창원시 명서동	전 남		
세명종합상사	051-311-0648	사상구 광천동	K5공구	055-273-0901	창원시 명서동	대일철물공구	061-243-1277	목포시 산정동
대일종합상사	051-311-2006	사상구 광천동	772물공구	055-238-0066	창원시 팔곡동	호남물공구	061-279-0908	목포시 산정동
동신종합상사	051-302-0909	사상구 오라동	성보기공	055-265-4001	창원시 팔곡동	형제종합상사	061-743-4470	순천시 금곡동
대우공구	051-245-2909	서구 토성동	태양상사	055-238-0181	창원시 팔곡동	명성철물장식	061-741-4456	순천시 풍곡동
24시공구	051-865-0634	영제구 연산동	재길철물	055-645-2609	통영시 합성동	동신철물	061-651-6062	여수시 오덕동
동신종합상사	051-817-0909	진구 부천1동	삼일공구	055-583-3109	함안군 가야읍	서울철물공구	061-684-2151	여수시 신기동
동백공구	051-743-5889	해운대구 우1동	경 북			화순종합공구	061-371-0904	화순군 화순읍
울 산			동일종합상사	053-815-1474	경산시 중평동	전 북		
농민하우스	052-276-6711	남구 삼산동	영준공구	054-746-0909	경주시 노서동	남흥공구	063-564-0409	고창군 고창읍
계영기공	052-272-0600	남구 삼산동	태성종합공구	054-746-0945	경주시 사정동	보국철물	063-445-2863	군산시 대명동
대인기공	052-257-1894	남구 삼산동	대흥종합기계	054-475-7600	구미시 임수동	제일기계공구	063-636-0989	남원시 금곡동
동양공구	052-258-1109	남구 삼산동	대일종합공구	054-431-1353	김천시 오묘동	반도중구종합상사	063-842-9694	익산시 평화동
농민기공	052-276-6795	남구 삼산동	대건공구	054-556-0989	문경시 점촌동	동성인테리어철물	063-272-1777	전주시 고사동
농민산업공구	052-261-9989	남구 삼산동	신진철물공구	054-536-0688	삼주시 내남동	동양철물공구	063-251-2723	전주시 고사동
동성공구마트	052-256-2208	남구 삼산동	하나기업	054-933-0620	성주군 신남면	한진기계공구	063-531-0860	정읍시 연지동
동창목공철물	052-267-9800	남구 삼산동	안동기계공구	054-859-0989	안동시 천리동	강 원		
유성공구	052-227-0489	남구 삼산동	경북철물공구	054-633-7997	영주시 가흥동	강릉기계공구	033-648-8909	강릉시 교동
은해건축자재	052-264-6111	울주군 언양읍	포항자재센터	054-281-9788	포항시 대정동	동해38공구	033-531-3809	동해시 평평동
경 남			보시물일동보철물	054-244-2085	포항시 죽도동	계양전동공구	033-575-0945	삼척시 남양동
국제공구	055-636-5600	거제시 신현동	대 구			동진기	033-252-0203	춘천시 소양로
대성티엔티	055-638-8983	거제시 신현동	명성티엔티	053-632-3182	달서구 진전동	동원공구	033-244-0949	춘천시 소양로
이공구마트	055-633-8983	거제시 신현동	동부종합상사	053-982-8003	동구 용계동	제 주		
형구철물	055-632-3221	거제시 신현동	선산목공	053-421-9430	북구 동인1가	용신공구마트	064-763-0310	서귀포시 동흥동
한영물공구	055-944-0933	거창군 거창읍	에이샵	053-604-0907	북구 산곡동	서귀종합공구	064-733-8724	서귀포시 토평동
무학공구	055-673-4460	고성군 고성읍	남수철물	053-425-1360	북구 칠성1가	공구이마트	064-702-0982	제주시 오라1동
한일종합상사	055-339-3700	김해시 구산동	경산목공	053-424-5818	북구 칠성1가	공구랜드	064-745-0949	제주시 오라2동
김해공구	055-332-0989	김해시 서상동	선경철물	053-423-8970	북구 칠성1가	부산공구	064-757-7147	제주시 용담1동
신흥공구	055-294-0966	마산시 구암2동	선명목공	053-423-8465	북구 칠성1가	제주물공구	064-758-0234	제주시 용담1동
태흥공구상사	055-241-6157	마산시 신호동	제일기업	053-355-1385	서귀포시 대동 2가	일도공구마트	064-752-0989	제주시 이도2동
대영목공구	055-297-3544	마산시 평역1동	영남공구상사	053-422-8609	중구 태평로3가			
대한목공구	055-296-0985	마산시 양덕2동	보성공구	055-556-9875	중구 달성동			
OK공구	055-353-0989	일양시 내이동	화산전동기기	053-253-2078	중구 북성로 2가			
백방목공구	055-833-1789	사천시 돌곶동	금강연철	053-256-8281	중구 서마동			

REV.2013.10

품질 보증서

■ 제일타카(주)에서 제작된 제품(Nailer, Stapler, Pinner 등)은 최상의 재료와 최고 수준의 제작 기술을 활용하여 설계・제작되었습니다.

제품 보증 기간 내에 발생 된 고객 불만족 사항에 대해서는 제일타카(주)가 인정하는 검사자(해당 A/S 실무 담당자 또는 그 이상자)의 기술 검토를 통해 재료의 결함, 부품의 결함, 제작・기술상의 결함으로 결정된 경우에 한하며 무상으로 수리 및 부품 교체 서비스를 받을 수 있습니다.

■ 고객 만족도 100% 달성이라는 품질 목표로 품질 제일주의를 지향하고 있는 제일타카(주)의 제품 보증 기한을 아래와 같이 기술하여 소비자의 편의를 제공하고자 합니다.

1)부품 보증(피스톤 세트, 피스톤 오링, 헤드 벨브 오링)

-최종 사용자가 구입한 날로부터 45일

2)본체 주조물(Body, Cap)

-최종 사용자가 구입한 날로부터 1년

3) 기타 부품

-최종 사용자가 구입한 날로부터 90일

4)무상 수리 및 부품 교체 서비스 조건

a.철결하고 건조한 규정한 공기압만을 사용한 경우 (5.0kgf/cm²~8.0kgf/cm²)

b.제품 설명서에 명시된 내용(안전 수칙, 사용 방법 및 주의사항 등)을 준수하여 사용한 경우

c.최종 사용자가 구입한 제품이 보증 기간 내에 있음을 입증할 수 있는 구매 영수증이나 기타 증빙 서류를 첨부하여 본사 지정 A/S 센터에 제품을 반납한 경우

단, 운송비는 최종 사용자가 선불 지급처리하고 소비자 귀책 여부에 따라 자사에서 운송비 지급

위 사항들이 모두 만족된 조건하에서 무상 서비스를 받을 수 있으며 제품을 임의로 개조하여 사용하였을 경우 또는 J ITOOL 순정 부품을 사용하지 않았을 경우 무상 서비스를 받을 수 없습니다.

■ 문서로 명시하지 않은 그 외의 보증은 어떠한 경우라도 적용되지 않으며 보증 실패(해당 A/S 실무 담당자 불인정)로부터 초래될 우연적, 필연적, 직접적, 간접적 배상에 대해서는 책임지지 않습니다.


■ 이 제품의 구매자에 대한 제일타카(주)의 제품 보증 위반, 계약 위반, 불법 행위로부터 발생하는 손실이나 손해에 대한 제일타카(주)의 채무에 대한 의무는 권리채무를 발생시킨 본 제품의 가격을 초과할 수 없습니다.

■ 이 제품의 사용과 관련된 모든 책임은 상기 명시된 보증 기간의 만료와 동시에 소멸됩니다.

제품 보증카드			
모델명			Serial No.
구입처	상호명		구입일자
	소재지		Tel.
구매자	성명		Tel.
	주소		
 제일타카(주)			

※공구 구입 즉시 제품 보증 카드를 작성해 주시기 바랍니다.

메 모



	Page
1. Safety Instructions -----	27
2. Specifications and Technical Data -----	30
3. Instructions for Operation -----	31
4. Maintenance and Inspection -----	34
5. Service and Repairs -----	35
6. Maintenance Chart & Operator Troubleshooting -----	36

Responsibility of Distributor



When selling this tool, all the salespersons and distributors who deal in the tool must make sure that a consumer reads and understands the instructions before using it.

Responsibility of Employer



All the employers who use this tool must observe safety regulations and all the other guidelines in this manual to keep a user and those around him or her safe and to use it correctly, and must have a user read and understand the instructions before using it.

DANGER

Dangerous and improper use of the nailer can result in death or serious injury.

This manual features safety information for your safety.

Be sure to read and understand this manual before using this tool.

Please keep this manual well to allow other workers to read it before using this tool.

DEFINITIONS OF SIGNAL WORDS

DANGER

Indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.

WARNING

Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.


CAUTION

Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury, or may cause a damage to the tool.

1. SAFETY INSTRUCTIONS



1. Be sure to put goggles on before operation.

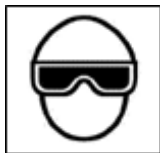

Since a nail fired wrongly through careless handling can spring out or you are always exposed to danger that can be caused by dust and extraneous substances dispersed by exhausted air, you must always wear goggles for operation. Goggles should meet requirements of **ANSI Z89.1-1997** and be able to protect both the front and the sides. An employer has responsibility for having workers and all the other persons wear protective equipment in a workshop.

2. Put on hearing protective equipment in certain working environment.




In working environment exposed to loudness which may result in hearing loss, an employer (management) must provide hearing protection equipment to a user and others in the workshop and a worker must wear it if necessary.

3. Never use any power source but compressed air.




As this tool is designed and manufactured to operate using air pressure that is generated by an air compressor authorized by an safety certification authority, you cannot use any kind of gas—combustible gases such as oxygen and acetylene—except this. Otherwise, it may not only cause mechanical trouble but also malfunction or explosion, resulting in infliction of fatal injury on a user or those around him or her.

4. Use it within the optimum range of air pressure.

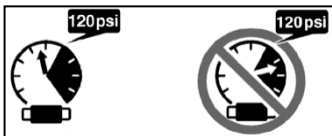

This tool is designed to operate within a range of pressure between 70 psi and 120 psi (or between 5kgf/cm² and 8kgf/cm²). Connect this tool to a pressure controllable device so that you can work under fixed pressure. When operating this tool, never use it under pressure of 120 psi (or 8kgf/cm²) and over. This tool can blow up when connected to pressure higher than 200 psi (or 14kgf/cm²).

5. Don't use it near inflammables (combustibles).

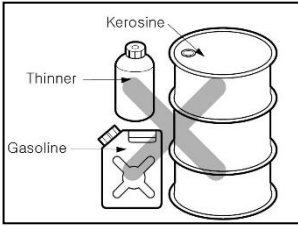

Never operate this tool near inflammables (such as thinner and gasoline). Combustible gas from such materials can be sucked into a compressor and compressed together with air, possibly resulting in explosion.

6. Be careful not to aim or fire it toward yourself or any other person in any case.



You should be careful not to aim it toward yourself or any other person in any case whether the tool is loaded with nails or not. Then, even if malfunction or undesired firing occurs, you can minimize damage caused by the fired nail. Otherwise, it may result in serious injury.

7. Never touch the trigger except when this tool operates for work.

Never touch the trigger except when air is connected to this tool, which operates for work. It is especially very dangerous to change the position or move around during operation with your finger fixed on the trigger, and you may not do any similar action. Otherwise, possible carelessness may result in infliction of serious injury on a user or those around him or her.

 WARNING

8. Connect a proper connector to this tool correctly.

The connector for this tool should never have pressure kept when air supply is cut off. If an improper part is applied, then the tool can operate due to pressure left within it even after the air line is disconnected, possibly resulting in injury.

9. Disconnect the air line and empty the nails out of the magazine in case that the tool isn't used.

Be sure to cut off air supply and empty the nail magazine when the work is completed or when you move to another workshop, maintain, disassemble, or repair this tool, or clear jam. Make sure that the air line is disconnected in loading the magazine with nails again.

 CAUTION

10. Make sure that each fastener is locked tightly.

The tool can be damaged if you use it with each fastener loosened, or screws or bolts assembled wrongly. Make sure that all screws and bolts are assembled correctly and tightly before using the tool.

11. Never let a worker remove or manipulate a safety device, or recompose the tool at his or her discretion.

If you remove a safety device, or manipulate or recompose the tool at will, it can cause a drop in performance and breakdown of the tool and result in injury due to mechanical trouble and malfunction.

12. Be sure to disconnect the air line and empty nails out of the magazine if the tool is not used.

You must disconnect the air line and empty the nail magazine when the work is completed or suspended, when you go out of a workshop, when you move or transfer the tool, or on other occasions.

13. Stick the muzzle correctly to the target plane for nailing.

If correct nailing is not implemented on the target plane, the fired nail can spring out, possibly resulting in injury.

14. You are prohibited from using the tool for other purposes than nailing and from throwing or dropping it.

The resultant shock can cause damage to main parts or malfunction, possibly resulting in injury.

15. Never nail hard or thin objects, an edge of the target surface, or a nailhead already driven.

Otherwise, the nail fails to be driven in but springs out, thus inflicting an injury on a worker or those around him or her.

16. Conduct operations in an upright and safe position all the time

Long-time work in an unstable and wrong position may put excessive stress on the body, possibly resulting in an injury.


17. When the temperature falls below zero, it is important to note that you should keep the tool warm in a safe and convenient way.

If you fail to do this, make the tool get warm according to the following procedure.

- ① Control air pressure in the range of 40psi to 70psi.
- ② Remove all the nails loaded in the tool.
- ③ Connect the air line to the tool and try mock nailing.
 - Keep pressure low enough to operate the tool in a proper way.
 - Operate it slowly to let the actuator get warm.
 - Piston operation helps Bumper and O-ring maintain the original elasticity.

2. SPECIFICATIONS AND TECHNICAL DATA

1. Name of Parts

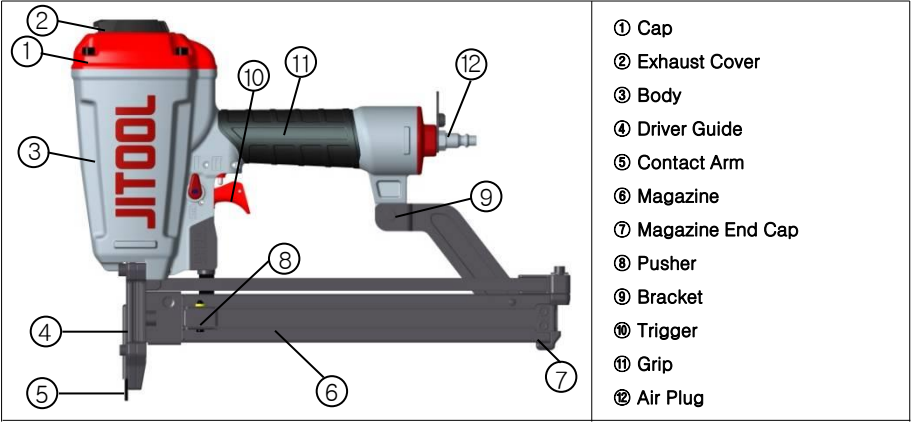

2. Specifications of Nailer

Product	S850/16	S950/16
Dimensions Length×Height×Width	11-7/8" X 15-7/16" X 4" (300mm X 392 mm X 101mm)	11-7/8" X 15-7/16" X 4" (300mm X 392 mm X 101mm)
Weight	2.5kg	2.5kg
Operating Pressure	70 ~ 120 psi (5 ~ 8kgf/cm ²)	70 ~ 120 psi (5 ~ 8kgf/cm ²)
Air Inlet	1/4" NPT	1/4" NPT

3. Fastener Specifications

모델명	S850/16	S950/16
Crown	11.1mm (7/16")	12.2mm (1/2")
Length	25mm ~ 50mm (1" ~ 2")	25mm ~ 50mm (1" ~ 2")
Width	1.40mm (0.055")	1.40mm (0.055")
Thickness	1.57mm (0.062")	1.57mm (0.062")
Gauge	16	16

4. Applications

- * Sheathing
- * Subflooring
- * Roof Decking
- * Furniture
- * Pallets
- * Crate & Box Assembly

3. Instructions for Operation

<Instructions for Operation>

※ Be sure to read the safety instruction before using this tool.

Preparations

1. Be sure to put on personal protective equipments—for example, goggles, earplugs, safety cap—before using this tool.
2. Be sure to use an air compressor authorized by the safety certification authority as a pressure source for operating this tool within the optimum range of pressure (70~120psi).
3. Make sure that this tool has no trouble about the safety device, the trigger, fasteners such as bolts, and so on.
4. Inject three or four drops of oil used exclusively for a nailer into the air plug before using this tool. (Do this regularly once a day if possible.)
5. Check the air line and the air connector for damage and don't use longer air line than necessary (over 5m).

Preliminary Checkup


1. To give a checkup to the tool, adjust the operating pressure to 70 psi (5kgf/cm²) before air connection.
2. Stick the contact arm to the working plane and pull the trigger (single fire)
3. Keep pressure low as far as it may cause no trouble in operation within the optimum range of pressure according to hardness of the working plane and length of nails.

1. Loading Staples

⚠ WARNING


Turn the muzzle downward and never pull the trigger or press the contact arm in loading or unloading staples

- ① Pull the pusher toward the inlet of the magazine end make it fixed by the pusher stopper.
- ② Insert staples into the upper part of the magazine.
- ③ Push the pusher stopper to move the pusher forward.

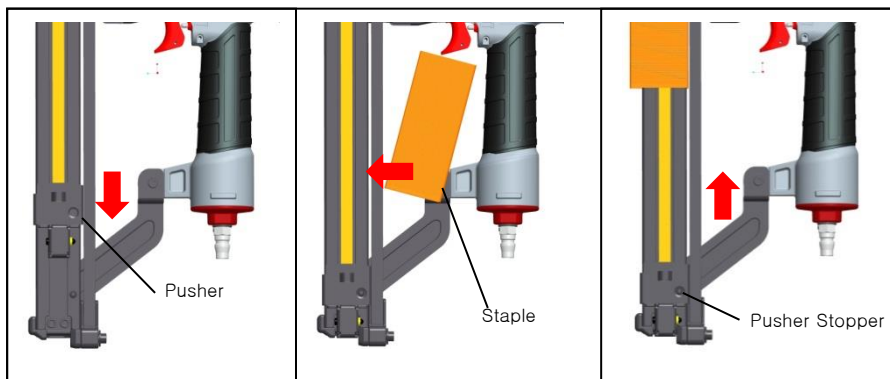

2. Unloading staples

- ① Pull the pusher toward the inlet of the magazine end make it fixed by the pusher stopper.
- ② Insert staples into the upper part of the magazine.
- ③ Push the pusher stopper to move the pusher forward.

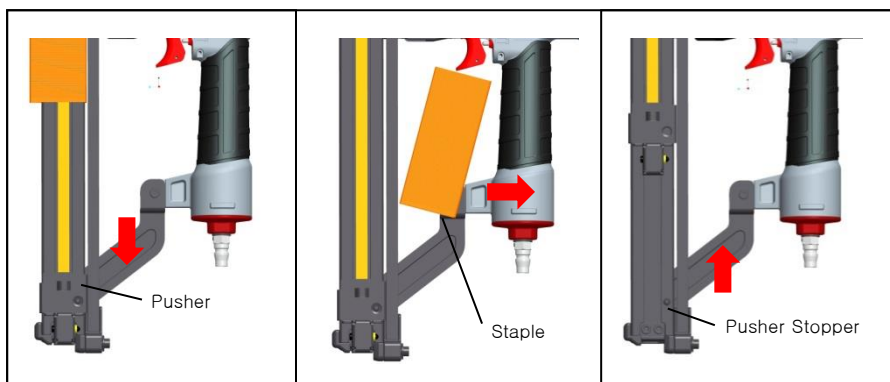

3. Methods of Operation

※ Implement single/contact fire operation and turn the trigger lock with the finger tip switch pressed.

1) Single fire operation

(※ Be sure to use only Single fire operation when this tool is fired on concrete surface.)



For operation on a precise position by one fire, put the finger tip switch toward the single fire form (S) and pull the trigger with the contact teeth pressed against the target position for nailing.

2) Contact fire operation



For successive fires, put the finger tip switch toward the contact fire form (C) and keep the contact teeth pressed against the target position for nailing with the trigger pulled.

3) Trigger lock



If there is no operation, fix the finger tip switch toward the trigger lock form (L) This prevents the trigger from being pulled.

4. Maintenance and Inspection

<Caution prior to inspection and maintenance>

※ Be sure to read the safety instruction before inspecting or maintaining this tool.

WARNING

Be sure to disconnect the air line before clearing jam, or repairing or inspecting the tool.

1. Clearing a Jam

If jam occurs during the nailing process, clear it according to the following procedure.

- 1) Disconnect the air line from the tool.
- 2) Unload nails left in the magazine.
- 3) Open the guide cover and driver guide .
- 4) Use a long nose to remove a nail caught in.



CAUTION

- After clearing jam, make sure that the product has no trouble before using it.
- If jam or other factors damage main parts, it can prevent normal operation.
- If any trouble occurs, stop using the tool and ask a nearby A/S center or a distributor for A/S.

2. Inspecting the Magazine

- 1) Disconnect the air line from the tool.
- 2) Inspect if the inside of the magazine is cleared or damaged.
(Dust or alien substances such as pieces of wood in the operation body of the pusher within the magazine can prevent smooth operation.)

3. Storing

- 1) When not in use for an extended period, apply a thin coat of the lubricant to the steel parts to avoid rust.
- 2) Do not store the tool in a cold weather environment. Keep the tool in a warm area.
- 3) When not in use, the tool should be stored in a warm and dry place. Keep out of reach of children.
- 4) All quality tools will eventually require servicing or replacement of parts because of wear from the normal use.

4. Maintenance Chart (Reference)

5. Operator Troubleshooting (Reference)



★ Supplement to the operating instruction

According to the European Norm EN 792-13 the regulation is valid from 01.01.2001 that all fastener driving tools with contact actuation must be marked with the symbol "Do not use on scaffoldings, ladders" and they shall not be used for specific application for example:

- When changing one driving location to another involves the use of scaffoldings, stairs, ladders or ladder alike constructions e.g. roof laths,
- * closing boxes or crates,
- * fitting transportation safety systems e.g. on vehicles and wagons.

5. Service and Repairs (A/S Request)

WARNING

- It is important to note that users or distributors who want to have this tool repaired must get A/S from A/S personnel trained in JITOOL.
- Use only parts supplied or authorized by JITOOL for repair.

6. Maintenance Chart & Operator Troubleshooting

1. Maintenance Chart


Practice	Reason	Method
Drain air line filter daily	Prevent accumulation of moisture and dirt.	Open manual petcock.
Keep lubricator filled.	Keep the tool lubricated	Fill with JITOOL pneumatic tool lubricant.
Clean element – then blow air through filter in direction opposite to normal flow.	Prevent clogging of filter with dirt.	Follow manufacturer's instructions.
Clean magazine and feeder mechanism.	Prevent a jam & Dry fire.	Blow clean daily.
Lubricate the Tool after nailing.	Extend the tool life.	Supply 2~3 drops of lubricant into the tool.
Drain air compressor.	Keep the tool operated properly.	Open petcock on air compressor tank.

2. Operator Troubleshooting

Problem	Check Method	Correction
Tool operates, but no nail is driven.	Check air pressure.	Reduce air pressure. (70~120psi)
	Check for a jam.	Clean a jam. (Refer to 4-1)
	Check for proper nail.	Use only recommended nails.
	Constant force spring weekend or damaged?	Replace constant force spring.
Tool does not operate.	Check air line & Plug	Check for air line connection and damage to fitting part (Change it in case of damage)
	Check for abnormality in head valve	Change O-ring in case of damage

Weak drive. Slow to cycle.	Check air pressure.	Reduce air pressure. (70~120psi)
	Check position Piston set.	Readjust.
	–	Supply of lubricant into the tool.
	Driver blade worn or damaged?	Part change (Contact JITOOL or Distributor)
	Piston O–ring worn or damaged?	
Nail driven too deep or shallow	Check air pressure.	Reduce air pressure. (70~120psi)
	Check contact Teeth Position	Adjust depth dial to adjust length of contact teeth
Skipping nails, Intermittent feed.	Check air pressure.	Reduce air pressure. (70~120psi)
	Check for proper nail.	Use only recommended nails.
	–	Supply of lubricant into the tool.
	Piston O–ring cut or heavily worn ?	Part change. (Contact JITOOL or Distributor)
Drives properly during normal operation, but does not drive fully at faster nailing speeds.	Check air pressure.	Reduce air pressure. (70~120psi)
	Check inside diameter of air hose.	Use larger air hose.

EXPLODED DIAGRAM OF S850/16

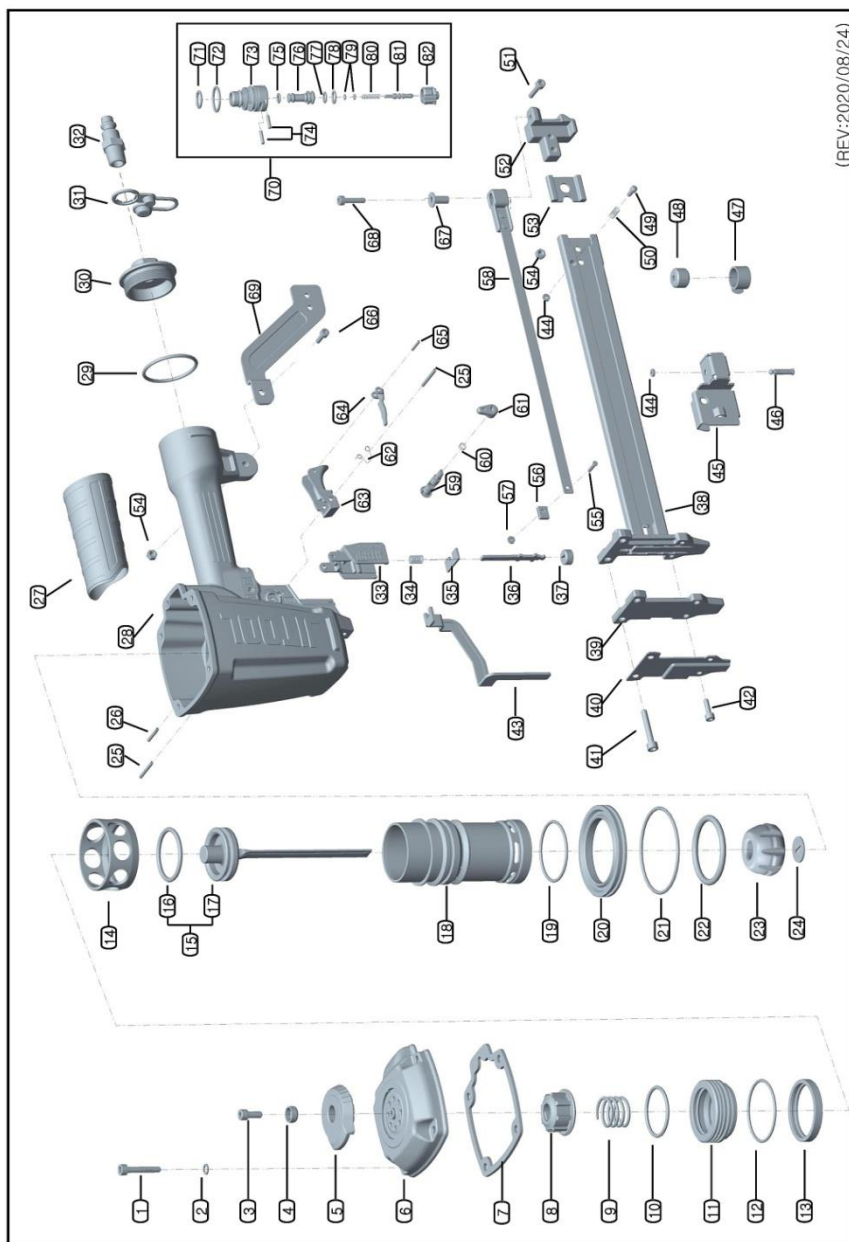

(REV:2020/08/24)


S850/16(16GA. 7/16" CROWN STAPLER)

NO.	DESCRIPTION	PART NO.	QTY	NO.	DESCRIPTION	PART NO.	QTY	NO.	DESCRIPTION	PART NO.	QTY
1	BOLT (M6x28L)	Z-06-280	4	29	END CAP O-RING	JNS45-B-003	1	57	PIN RETAINER	JN100-G-022	1
2	SPRING WASHER (for M6)	W-06	4	30	END CAP	JNS45-B-002	1	58	STAPLE GUIDE ASSEMBLY	S950/16-M-P002	1
3	BOLT (M6x15L)	ZN-06-150	1	31	PLUG CAP	9032-B-006	1	59	FINGER TIP SWITCH CAP	CT64-T-004	1
4	EXHAUST COVER WASHER	CT64-C-007	1	32	AIR PLUG	9032-B-005	1	60	FINGER TIP SWITCH SPRING	CT64-T-005	1
5	EXHAUST COVER	CT64-C-003	1	33	CONNECTOR HOUSING	CT64-S-103	1	61	FINGER TIP SWITCH BAR	ST64-T-003	1
6	CAP	S950/16-C-001	1	34	CONNECTOR SPRING	CT64-S-004	1	62	TRIGGER SPRING	CT64-T-008	1
7	GASKET	CT64R3-C-102	1	35	CONNECTOR HOLDER	CT64-S-005	1	63	TRIGGER A (OUT)	CT64-T-001	1
8	PISTON STOPPER	CT64-H-005	1	36	CONNECTOR	CT64-S-002	1	64	TRIGGER B (IN)	ST64-T-002	1
9	HEAD VALVE SPRING	CT64-H-006	1	37	RETAINER	CT64-S-006	1	65	ROLL PIN (Ø2.5x16L)	R-25-160	1
10	HEAD VALVE O-RING (IN)	CT64-H-003	1	38	NOSE ASSEMBLY	S850/16-M-P001	1	66	BOLT (M5x16L)	Z-05-160	1
11	HEAD VALVE	CT64-H-001	1	39	DRIVER GUIDE	S850/16-G-002	1	67	BUSHING	S950/16-L-007	1
12	HEAD VALVE O-RING (OUT)	CT64-H-004	1	40	GUIDE COVER	S950/16-G-003	1	68	BOLT (M5x25L)	Z-05-250	1
13	HEAD VALVE SEAL	CT64-H-002	1	41	BOLT (M6x35L)	ZN-06-350	2	69	BRACKET	S950/16-M-006	1
14	COLLAR	CT64-A-004	1	42	BOLT (M5x16L)	ZN-05-160	2	70	VALVE SET	NV-V-P001	1
15	PISTON SET	S850/16-P-P001	1	43	CONTACT ARM	S950/16-S-001	1	71	VALVE O-RING (MID)	NV-V-001	1
16	PISTON O-RING	CT64-P-003	1	44	STOPPER SEAL	951-M-008	2	72	PLUNGER CAP O-RING	CT64-V-011	1
17	PISTON ASSEMBLY	S850/16-P-P002	1	45	PUSHER	S850/16-M-003	1	73	VALVE	NV-V-003	1
18	CYLINDER	S950/16-A-001	1	46	SPRING PIN	S950/16-M-007	1	74	VALVE PIN (Ø3x14.2L)	NV-V-013	2
19	CYLINDER O-RING	CT64-A-005	1	47	PUSHER SPRING SET	S950/16-M-P003	1	75	VALVE PLUNGER O-RING (UP)	NV-V-004	1
20	CYLINDER GUIDE	CT64-A-002	1	48	DRUM	S950/16-M-016	1	76	VALVE PLUNGER	NV-V-007	1
21	CYLINDER GUIDE O-RING	CT64-A-006	1	49	PUSHER STOPPER	S850/16-M-010	1	77	VALVE PLUNGER O-RING (MID)	CT64-V-005	1
22	SUPPLY HOLE SEAL	S950/16-A-007	1	50	PUSHER STOPPER SPRING	951-M-011	1	78	VALVE PLUNGER O-RING (LOW)	NV-V-006	1
23	BUMPER	CT64-A-003	1	51	BOLT (M5x22L)	Z-05-220	2	79	PLUNGER O-RING	CT64-V-008	2
24	DRIVER GUIDE PLATE	S850/16-A-008	1	52	MAGAZINE END CAP	S850/16-L-001	1	80	PLUNGER SPRING	CT64-V-009	1
25	ROLL PIN (Ø3x28L)	R-30-280	2	53	MAGAZINE SPACER	S850/16-M-021	1	81	PLUNGER	NV-V-010	1
26	ROLL PIN (Ø3x22L)	R-30-220	1	54	LOCK NUT (for M5)	NN-05	3	82	PLUNGER CAP	NV-V-012	1
27	GRIP	CT64R3-B-004	1	55	NOSE PIN	S950/16-G-004	1				
28	BODY	CT64R3-B-001	1	56	STAPLE GUIDE RUBBER	S950/16-M-020	1				

** All the parts of nailer can be changed for improvement and re--design without announcement.

(REV. : 2020/08/24)

EXPLODED DIAGRAM OF S950/16

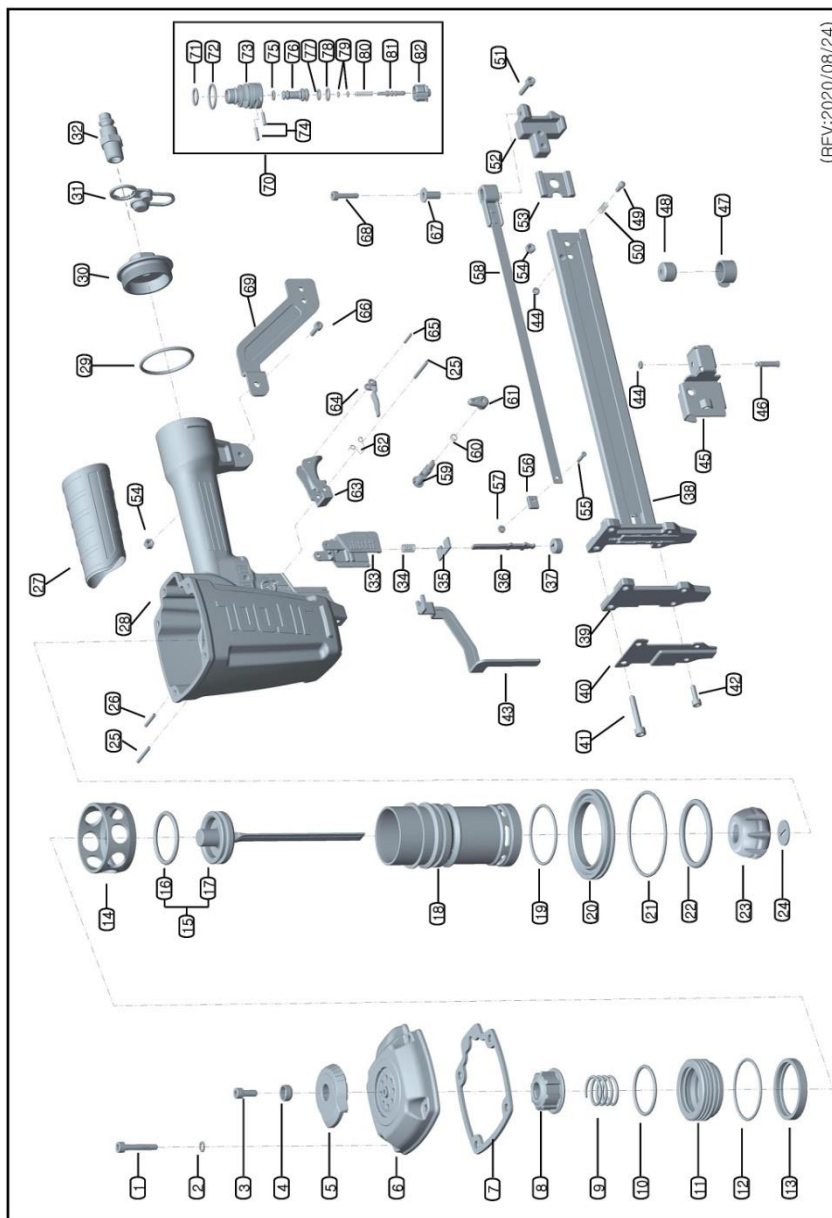

(REV:2020/08/24)

S950/16(16GA. 1/2" CROWN STAPLER)

NO.	DESCRIPTION	PART NO.	QTY	NO.	DESCRIPTION	PART NO.	QTY	NO.	DESCRIPTION	PART NO.	QTY
1	BOLT (M6x28L)	Z-06-280	4	29	END CAP O-RING	JNS45-B-003	1	57	PIN RETAINER	JN100-G-022	1
2	SPRING WASHER (for M6)	W-06	4	30	END CAP	JNS45-B-002	1	58	STAPLE GUIDE ASSEMBLY	S950/16-M-P002	1
3	BOLT (M6x15L)	ZN-06-150	1	31	PLUG CAP	9032-B-006	1	59	FINGER TIP SWITCH CAP	CT64-T-004	1
4	EXHAUST COVER WASHER	CT64-C-007	1	32	AIR PLUG	9032-B-005	1	60	FINGER TIP SWITCH SPRING	CT64-T-005	1
5	EXHAUST COVER	CT64-C-003	1	33	CONNECTOR HOUSING	CT64-S-103	1	61	FINGER TIP SWITCH BAR	ST64-T-003	1
6	CAP	S950/16-C-001	1	34	CONNECTOR SPRING	CT64-S-004	1	62	TRIGGER SPRING	CT64-T-008	1
7	GASKET	CT64R3-C-102	1	35	CONNECTOR HOLDER	CT64-S-005	1	63	TRIGGER A (OUT)	CT64-T-001	1
8	PISTON STOPPER	CT64-H-005	1	36	CONNECTOR	CT64-S-002	1	64	TRIGGER B (IN)	ST64-T-002	1
9	HEAD VALVE SPRING	CT64-H-006	1	37	RETAINER	CT64-S-006	1	65	ROLL PIN (Ø2.5x18L)	R-25-160	1
10	HEAD VALVE O-RING (IN)	CT64-H-003	1	38	NOSE ASSEMBLY	S950/16-M-P001	1	66	BOLT (M5x16L)	Z-05-160	1
11	HEAD VALVE	CT64-H-001	1	39	DRIVER GUIDE	S950/16-G-002	1	67	BUSHING	S950/16-L-007	1
12	HEAD VALVE O-RING (OUT)	CT64-H-004	1	40	GUIDE COVER	S950/16-G-003	1	68	BOLT (M5x25L)	Z-05-250	1
13	HEAD VALVE SEAL	CT64-H-002	1	41	BOLT (M6x35L)	ZN-06-350	2	69	BRACKET	S950/16-M-006	1
14	COLLAR	CT64-A-004	1	42	BOLT (M5x16L)	ZN-05-160	2	70	VALVE SET	NV-V-P001	1
15	PISTON SET	S950/16-P-P001	1	43	CONTACT ARM	S950/16-S-001	1	71	VALVE O-RING (MID)	NV-V-001	1
16	PISTON O-RING	CT64-P-003	1	44	STOPPER SEAL	951-M-008	2	72	PLUNGER CAP O-RING	CT64-V-011	1
17	PISTON ASSEMBLY	S950/16-P-P002	1	45	PUSHER	S950/16-M-003	1	73	VALVE	NV-V-003	1
18	CYLINDER	S950/16-A-001	1	46	SPRING PIN	S950/16-M-007	1	74	VALVE PIN (Ø3x14.2L)	NV-V-013	2
19	CYLINDER O-RING	CT64-A-005	1	47	PUSHER SPRING SET	S950/16-M-P003	1	75	VALVE PLUNGER O-RING (UP)	NV-V-004	1
20	CYLINDER GUIDE	CT64-A-002	1	48	DRUM	S950/16-M-016	1	76	VALVE PLUNGER	NV-V-007	1
21	CYLINDER GUIDE O-RING	CT64-A-006	1	49	PUSHER STOPPER	S950/16-M-010	1	77	VALVE PLUNGER O-RING (MID)	CT64-V-005	1
22	SUPPLY HOLE SEAL	S950/16-A-007	1	50	PUSHER STOPPER SPRING	951-M-011	1	78	VALVE PLUNGER O-RING (LOW)	NV-V-006	1
23	BUMPER	CT64-A-003	1	51	BOLT (M5x22L)	Z-05-220	2	79	PLUNGER O-RING	CT64-V-008	2
24	DRIVER GUIDE PLATE	S950/16-A-008	1	52	MAGAZINE END CAP	S950/16-L-001	1	80	PLUNGER SPRING	CT64-V-009	1
25	ROLL PIN (Ø3x28L)	R-30-280	2	53	MAGAZINE SPACER	S950/16-M-021	1	81	PLUNGER	NV-V-010	1
26	ROLL PIN (Ø3x22L)	R-30-220	1	54	LOCK NUT (for M5)	NN-05	3	82	PLUNGER CAP	NV-V-012	1
27	GRIP	CT64R3-B-004	1	55	NOSE PIN	S950/16-G-004	1				
28	BODY	CT64R3-B-001	1	56	STAPLE GUIDE RUBBER	S950/16-M-020	1				


** All the parts of nailer can be changed for improvement and re-design without announcement.

(REV. : 2020/08/24)

MEMO

A large, empty rectangular box with rounded corners and a double black border, intended for writing a memo.

MEMO



Better Tools, Better Works!



JITOOL KOREA

18, Jikdong-ro, Gwangju-si, Gyeonggi-do 464-090, Korea

Tel. +82-2-445-2500 Fax. +82-2-445-2506

E-mail. jitool@jitool.com / www.jitool.com

JITOOL USA CORP.

14404 Iseli Road, Santa Fe Springs,

CA 90670, USA

Tel. +1-562-404-8740 Fax. +1-562-404-8490